


ASSEMBLY INSTRUCTION

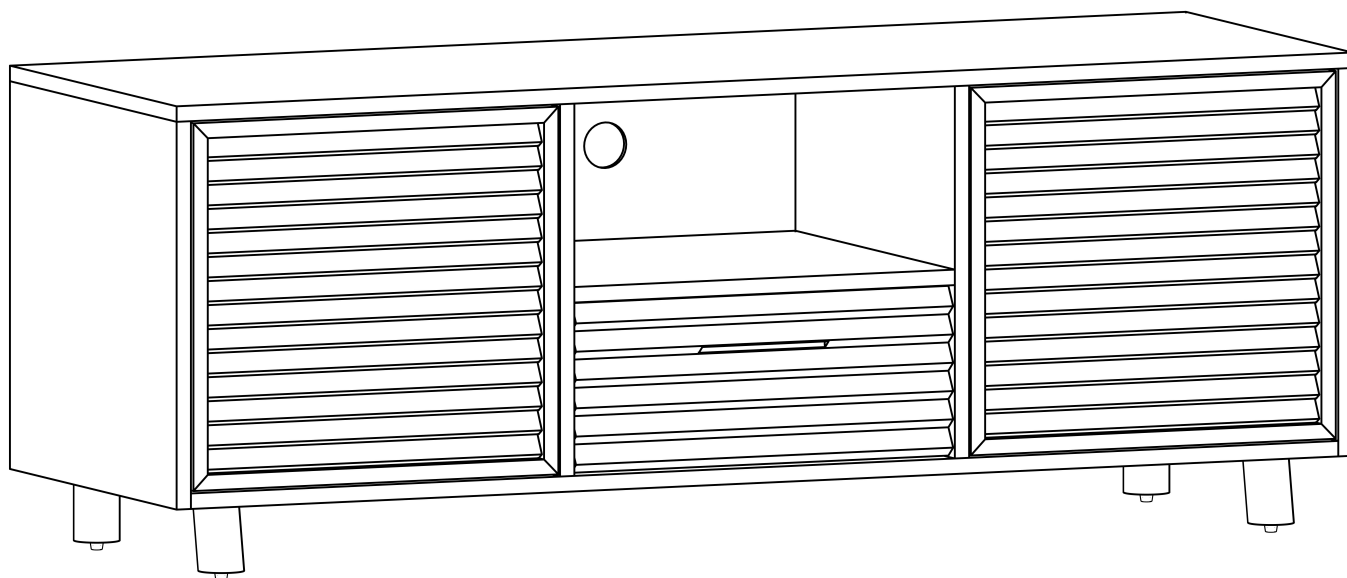

UNO TV UNIT

PRODUCT CODE : HOCON00056


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult).




For most products, two persons are recommended.


EASY ●●○○○ **DIFFICULT**

Requirement for Assembly

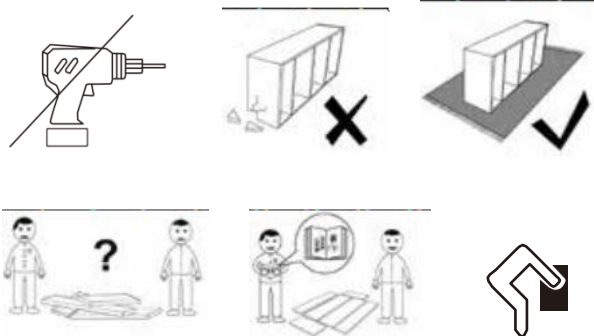


2 PERSONS RECOMMENDED

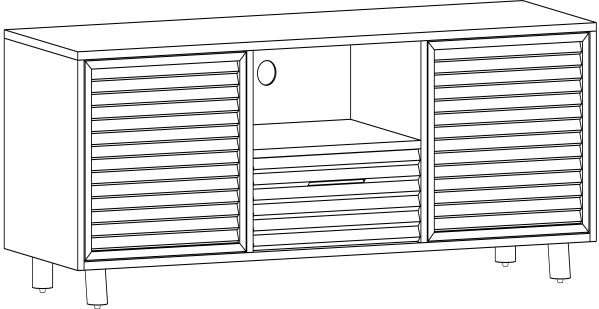  HARDWARE DETAIL		ASSEMBLED PRODUCT
HARDWARE	QTY.	
 <p>Allen Bolt M8x12mm</p>	8	
 <p>(Allen Key No.5)</p>	1	

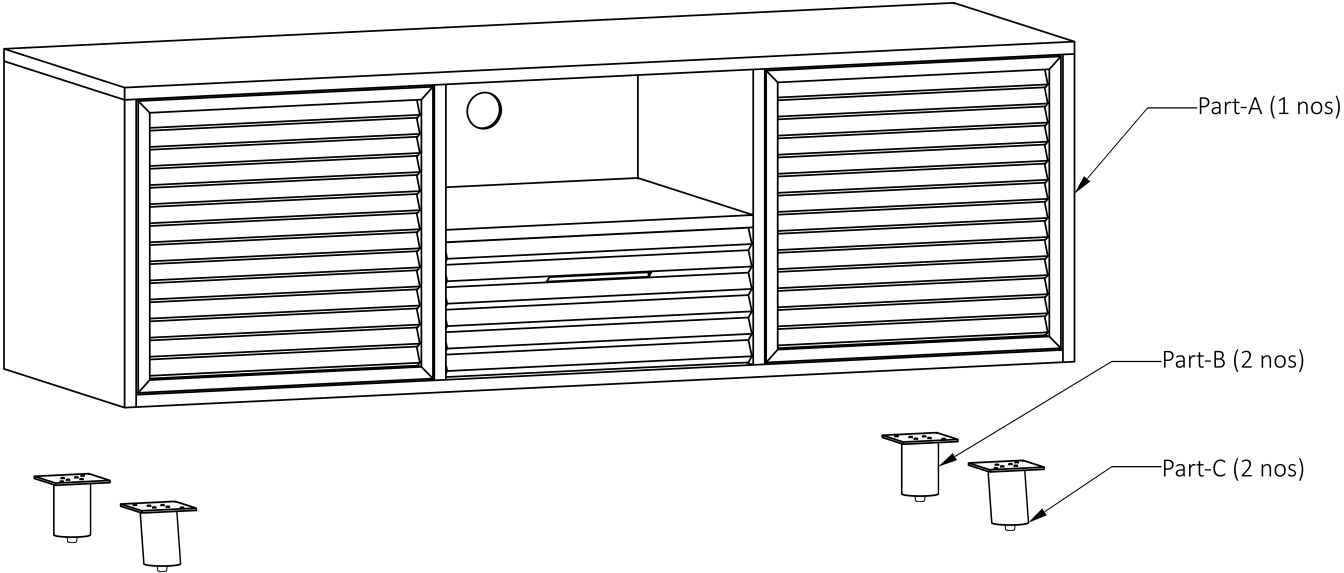


STEP01

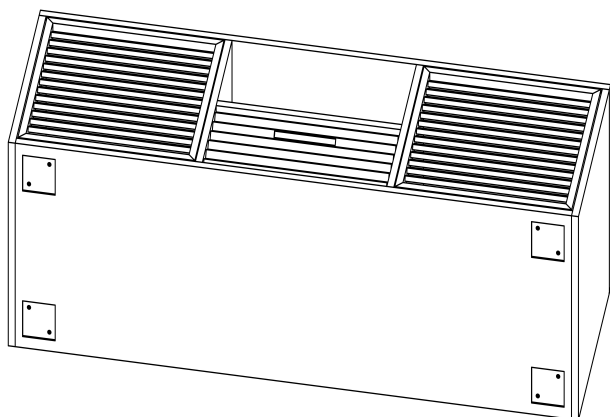


Flip the Part –A as shown in Fig.

STEP02

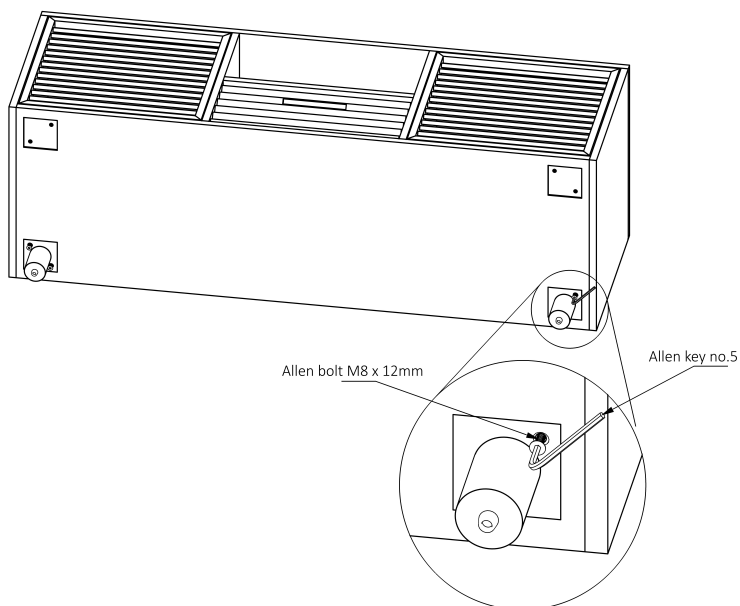


Place the Part-A and then fix Part-B & A using allen bolt of 12mm with the help of allen key as shown in fig.

STEP03

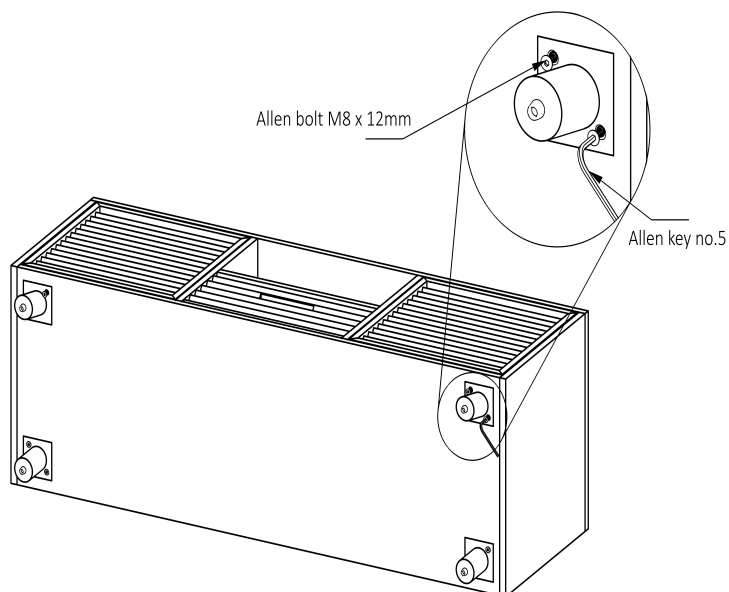

Now fix Part-C and last assembled part using allen bolt of 12mm with the help of allen key as shown in fig.

STEP04

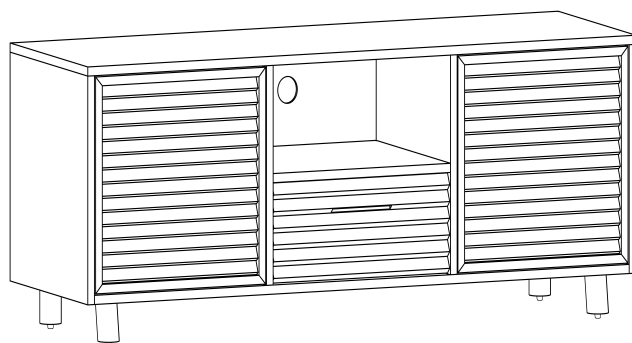

Turn the tv unit.
Your tv unit is Ready.

Thank you for your purchase!

We hope you will enjoy your new product for many years to come. Our commitment to providing quality products does not simply end when a purchase is made. We stand behind our products and will provide any support needed in order for you to fully enjoy your purchase. Your satisfaction is the greatest recognition we could have.

Because we value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us any time. To help expedite the service, please have the assembly instructions available, along with your order receipt.

Note :

Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.

CARE INSTRUCTIONS

Clean

Dust off with a soft dry cloth only.

For cleaning, use a mild cleansing agent. Do not use agents with sanding properties or which contain ammonia or bleach.

Stains

Take care of spills immediately. Absorb the spill with a clean white cloth or paper towel. Gently dab the surface and lift the stains.

Avoid

Keep the furniture away from direct sunlight and away from heat sources; excessive exposure to sunlight may fade the colour of the upholstery.

To protect furniture from moisture, avoid placing the furniture in direct contact with damp walls. In case of contact, wipe the furniture promptly with a dry, soft and lint-free cloth.

Always lift and place furniture pieces while repositioning. Dragging the furniture over a pro- a longer period of time can weaken the joints.

Always use a coaster and mats while placing hot, cold or wet materials on the furniture to avoid surface damage.

Avoid using furniture polish, chemical solvents and cleaners for our range of children's furniture.