






Instruction Manual

Stainless Steel Gas Stove 1B, 2B, 3B & 4B

Every product that bears the PREETHI brand name has to pass a series of stringent quality tests. Preethi, relies on its core values of Performance, Quality, Reliability & Safety. Our mission remains single-minded: to improve the family's quality of life through the superior quality and efficiency of our home appliances.

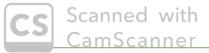


Preethi'i

CUSTOMER CARE CENTRES





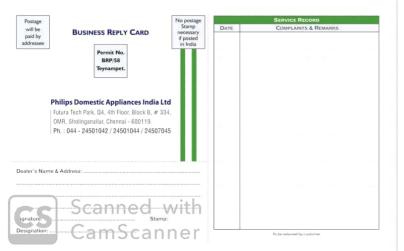

CONGRATULATIONS

on PURCHASING a WINNER

Dear Customer,

Thank you for choosing New Preethi Stainless Steel Gas Stove. This inspired new design is another unique product from Preethi.

Preethi Stainless Steel Gas Stove design and user friendly features is the outcome of diligent research and extensive consumer feedback. The result is a product that makes your everyday cooking fast, efficient and a lot of fun.

All Preethi products are designed to meet international standards in safety and quality. We encourage you to read and store this reference guide carefully to ensure many years of trouble free and easy cooking!

Welcome to the Preethi Family !!

Table of Contents

	Contents	Page No					
1.	Features	3					
2.	Product Contents	4					
3.	Technical Specifications	4					
4.	How to Assemble	5					
5.	User Instructions	5					
6.	Lighter Holder Assembly Instructions	6					
7.	Do's & Don'ts	6					
8.	Trouble Shooting	7					
9.	Save Gas, Save Money	7					
10	Warranty Card	8					
	cu une careScant	ned					

amScanner



Preethi Ballon Born	Stainless Steel Gas Stove SSGS 001/002/003/004/005/006/007/008	Preethi	Stainless Steel Gas Stove SSGS 001/002/003/004/005/006/007/008
WA	RRANTY CARD		nance of your Stainless Steel Gas Stove and ment. IN CASE OF COMPLAINTS write to us 0 00005
Date Sold:SI, No:			
	55:	Sender's Name & Address (in BLOC	KLETTERS):
Signature:	Stamp:		
TERMS & CONDITIONS OF WARRA	NTY AND SERVICE POLICY	Preethi SAL	Stainless Steel Gas Stove 5565 001/002/003/004/005/006/007/008
Personnel for scrutiny while authorised Service Centre. 02. The Warranty does not cover of the condition of	of the Warrany Card, which should be shown to our Senice vending your Sainless Steel Gas Store for service to our kenage due to michanding, negligence, breakage or cracking Warrany period tartung from manufacturing defects) will be stoomer. Care Centres will not charge you for components or store to the startung period, our Custonier Care Centre will levy a the Warrany period, our Custonier Care Centre will levy a the spaced. Them is allowed through and services in here. We country of part data.	Date Sold:	
basis, become the property of			to us through our dealer)

Trouble Shooting:

Problem	Possible Reason	Solution						
Gas stove does not ignite	Main gas valve is closed.	Open the main gas valve.						
	Bend/Block in rubber tube.	Straighten the tube / remove the blockage.						
	No gas supply.	Replace the gas cylinder						
	No proper flow in the tube.	It could be due to air mixing repeat to ignite to remove the air in the tube						
Gas leakage	Leakage from gas tube	Close the main gas valve and replace the tube with a new one						
	Gas control knob not closed properly	Switch off the gas knob properly						
	Leakage from gas cylinder regulator	Replace your regulator / inform your gas dealer						
If flame is	Flame ports are clogged	Clean the burner holes with burner cleaning pin or wire brush						

Save Gas, Save Money:

Don't bol mik directly from freeze allow it to attain liquid state before boiling. Keep the part dorsed whenever possible.

Meep the part dorsed whenever possible is to be a support of the part of th

Product Contents



Model	Heavy Duty Brass Burners	Gas Control Knobs	Pan Supports	Rubber Legs	Stainless Steel Spill Trays		
Storm	1 N	1 N	1 N	4 N			
Glare	2 N	2.N	2 N	4 N			
Elda	2 N	2 N	2 N	4 N	2 N		
Fino	.2 N	2 N	2 N	4 N	2 N		
Vesta	2 N	2 N	2 N	4 N	2 N		
Ember	3 N	3 N	3 N	4 N	3 N		
Topaz	3 N	3 N	3 N	4 N	3 N		
Shine	4 N	4 N	4 N	4 N	4 N		

Technical Specification:

Model	Storm		orm Glare		Elda		Fino		Vesta		Ember		Topaz		Shine	
Type 1 Burner		2 Burner		2 Burner		2 Burner		2 Burner		3 Burner		3 Burner		4 Burner		
Model No	odel No SSGS 006		SSGS 007		SSGS 001		SSGS 002		SSGS 004		SSGS 003		SSG5 005		SSGS 008	
Burner Rating	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kçal/hr	g/hr	Kcal/hr	g/hr	Kcal/h
Small			1x153	1x1662	1x153	1x1662	1x153	1×1662	1x153	1x1662	1x153	1x1662	1x153	1x1662	2x153	2x166
Big	1x177	1x1930	1x177	1×1930	1x177	1x1930	1x177	1×1930	1x177	1×1930	1x177	1x1930	1x177	1×1930	2x177	2x1930
Super Big	14.	1-1	+	-	-21		-	-		1.5	1x209	1x2278	1x209	1x2278		
Total Gas Input	177	1930	330	3592	330	3592	330	3592	330	3592	539	5870	539	5870	660	7184
Gas	For use with LPG at 2.942 kN/m²(30 gf/cm²)															
Ignition System	Manual		Manual Manual Manual Manual		inual	Manual		Manual		Manual		Manual				

How to Assemble:

- While unpacking the product make sure that all parts of the gas stove are available in the pack.
- Place gas stove on a flat surface
- Turn your gas stove to upside down position and fix the legs at the given bottom space.

 After removing the nozzle cap, connect the gas cylinder by fixing
- the ISI certified rubber tube to the inlet of the nozzle.

 Push the rubber tube which is attached to the gas regulator in to the nozzle as far as it goes. (Ref fig.a)

 Place the gas control knob on the gas control valve stem and
- push firmly inside. (Ref fig.b)

 The cylinder should be always in vertical position and should not be used horizontally. (Ref fig.c)
- · Place the drip trays in position
- Place pan support on top by aligning to the holes on the stove.
 The tube used to connect the stove should be within 1.5 m (4.5). ft). It must not be extended from one place to another and must not past through doors, windows, walls, partitions, concrete



User Instructions:

- Open the gas regulator of the cylinder.
 Push the gas control knob and turn it to anti clockwise direction. towards the 'ON' position (Ref fig.a) while simultaneous lighting a match stick or gas lighter close to the top of the burner.

 Due to the air in the gas tube the burners may not ignite during
- the first time, turn the gas control knob clockwise to the 'OFF' position and try again until the burner ignites.

 Keep the gas control knob in 'ON' position while cooking. (Ref.
- + To reduce the flame (SIM) further turn the gas control knob anti
- To reduce the flame (SIM) further turn the gas control knob anti-clockwise. (Ref. fig. c)

 To put off the burner, turn the gas control knob clockwise to the 'OFF' position until the knob projects out. After changing the position close the gas regulator of the cylinder.

 Keep the stove and gas cylinder valve in 'OFF' position when not
- * Keep sufficient distance between the lighter and the burner
- while lighting the stove.

 Do not light stove placing the vessel on the pan support.





Lighter Holder Assembly Instructions:





- Use liquefied petroleum gas (LPG) only.
- * The room must be well ventilated Place the stove on a flat surface that is over the height of the gas cylinder.

Do's

- Use good quality rubber hose meant for LPG stoves
- Clean the burners regularly so that the holes in the burners do
- not get clogged.
 Check the gas tube regularly for wear and tear or leakage
- · Keep the gas stove and gas cylinder valve in 'OFF' position when
- Clean the burners with a wire brush and burner hole cleaner. If you wash the burner, wipe and dry before fixing.
- Clean the pan support in normal water and dry before use.
- If you suspect any gas leakage, open all windows, do not Operate any electrical devices or switches and close the regulator of the cylinder.

- X Don'ts
- Do not keep the tube in contacts with any other parts of stove. . Do not use the stove to dry towels, cloth etc.,

- Do not use vinyl plastic tube, as it is highly inflammable.
 Do not touch the pan supports of the stove while in use.
 Do not keep inflammable substances near the gas stove.
- Do not use a tube with twists, loops, links or any external
- Do not allow children near the stove. · Do not keep the cylinder in a tilted or horizontal position.
- Do not check for gas leaks with a flame.