



## Trouble Shooting:

Problem	Possible Reason	Solution
Gas stove does not ignite	Main gas valve is closed.	Open the main gas valve.
	Bend/Block in rubber tube.	Straighten the tube / remove the blockage.
	No gas supply.	Replace the gas cylinder
	No proper flow in the tube.	It could be due to air mixing repeat to ignite to remove the air in the tube.
Gas leakage	Leakage from gas tube	Close the main gas valve and replace the tube with a new one
	Gas control knob not closed properly	Switch off the gas knob properly
	Leakage from gas cylinder regulator	Replace your regulator / inform your gas dealer
If flame is abnormal	Flame ports are clogged	Clean the burner holes with burner cleaning pin or wire brush

## Save Gas, Save Money:

- Don't boil milk directly from freezer allow it to attain liquid state before boiling
- Keep the pan closed whenever possible
- Use metals such as stain less steel with Copper bottom whenever possible
- Maintain shiny outer surfaces of vessel and wipe utensils dry before placing them on the burner
- Don't use too much water while cooking as evaporating off the excess water will mean more use of LPG.
- Use pans which are wide enough to cover the entire flame
- Once a curry comes to a boil reduce the flame so that it is just enough to maintain boiling
- Check the regulator, pipes, burner for leaks and also ensure that regulator is switched off after cooking to eliminate any chance of wastage due to small leaks.

Blu Flame

## Table of Contents

Contents	
1.	Features
2.	Product Contents
3.	Technical Specifications
4.	How to Assemble
5.	User Instructions
6.	How to use Auto Ignition
7.	How to use Extendable Legs
8.	Glass Safety
9.	Do's & Don'ts
10.	Trouble Shooting
11.	Save Gas, Save Money
12.	Warranty Card
13.	Customer Care

## Features

- Easy to clean.
- Aesthetically designed body.
- Heavy duty and superior quality brass gas controls & brass burners for long life and higher efficiency.
- Best in class powder coated pan support and main gas pipe with in / out coating for easy gas flow and to avoid rust formations.
- Stainless steel detachable and fine polished drip trays
- Best in class and heavy duty aluminium mixing tube for better thermal efficiency.
- Quality standards conforms to IS 4246.
- Thermally toughened glass.
- Digitally Designed Thermally Toughened Glass (optional)



Blu Flame

## How to Assemble:

- While unpacking the product make sure that all parts of the glass top gas stove are available in the pack.
- Place gas stove on a flat surface.
- Turn your gas stove to upside down position and fix the legs at the given bottom space.
- After removing the nozzle cap, connect the gas cylinder by fixing the ISI certified rubber tube to the inlet of the nozzle.
- Push the rubber tube which is attached to the gas regulator in to the nozzle as far as it goes. (Ref fig.a)
- Place the gas control knob on the gas control valve stem and push firmly inside. (Ref fig.b)
- The cylinder should be always in vertical position and should not be used horizontally. (Ref fig.c)
- Place the drip/spill trays in position.
- Place pan support on top by aligning to the holes on the stove.
- The tube used to connect the stove should be within 1.5 m (4.5 ft). It must not be extended from one place to another and must not pass through doors, windows, walls, partitions, concrete slabs or floors.



Blu Flame

## User Instructions:

- Open the gas regulator of the cylinder.
- Push the gas control knob and turn it to anti clockwise direction towards the 'ON' position (Ref fig.a) while simultaneously lighting a match stick or gas lighter close to the top of the burner.
- Due to the air in the gas tube the burners may not ignite during the first time, turn the gas control knob clockwise to the 'OFF' position and try again until the burner ignites.
- Keep the gas control knob in 'ON' position while cooking. (Ref. fig.b)
- To reduce the flame (SIM) further turn the gas control knob anti clockwise. (Ref. fig.c)
- To put off the burner, turn the gas control knob clockwise to the 'OFF' position until the knob projects out. After changing the position close the gas regulator of the cylinder.
- Keep the stove and gas cylinder valve in 'OFF' position when not in use.
- Keep sufficient distance between the lighter and the burner while lighting the stove.
- Do not light stove placing the vessel on the pan support.



Do's

- Use liquified petroleum gas (LPG) only.
- The room must be well ventilated.
- Place the stove on a flat surface that is over the height of the gas cylinder.
- Use good quality rubber hose meant for LPG stoves.
- Clean the burners regularly so that the holes in the burners do not get clogged.
- Check the gas tube regularly for wear and tear or leakage.
- Keep the gas stove and gas cylinder valve in 'OFF' position when it is not in use.
- Clean the burners with a wire brush and burner hole cleaner. If you wash the burner, wipe and dry before fixing.
- Clean the pan support in normal water and dry before use.
- If you suspect any gas leakage, open all windows, do not operate any electrical devices or switches and close the regulator of the cylinder.



Don'ts

- Do not keep the tube in contacts with any other parts of stove.
- Do not use the stove to dry towels, cloth etc.,
- Do not use vinyl plastic tube, as it is highly inflammable.
- Do not touch the pan supports of the stove while in use.
- Do not keep inflammable substances near the gas stove.
- Do not use a tube with twists, loops, links or any external pressure.
- Do not apply excessive pressure to the gas control knob.
- Do not allow children near the stove.
- Do not keep the cylinder in a tilted or horizontal position.
- Do not check for gas leaks with a flame.

Blu Flame

Preethi

## CUSTOMER CARE CENTRES

<p><b>TAMIL NADU</b></p> <p>Avadi- Ph:044-26555387. cocsalam@preethi.in</p> <p>Kelkys- Ph:044-26420318. cckelkys@preethi.in</p> <p>Porur- Ph:044-24761797. cocporur@preethi.in</p> <p>T Nagar- Ph:044-24347418. cctdnagar@preethi.in</p> <p>Tambaram- Ph: 044-22261510. cctambaram@preethi.in</p> <p>Chidambaram- Ph:04144-223256. cocchidambaram@preethi.in</p> <p>Coimbatore I- Ph:0422-2232687. coccoimbatore2@preethi.in</p> <p>Coimbatore II- Ph:0422-2540887. coccoimbatore2@preethi.in</p> <p>Coonoor- Ph:0423-2236978. coccoonoor@preethi.in</p> <p>Dharmapuri- Ph: 04342-263233. cocdharmapuri@preethi.in</p> <p>Dindigul - Ph:0451-2423060. cocdindigul@preethi.in</p> <p>Erode- Ph:0424-2221200. cocerode@preethi.in</p> <p>Golichettygalyan Ph:04285-228889. cocgolichetty@preethi.in</p> <p>Hosur- Ph:04344-243434. cochosur@preethi.in</p> <p>Kancheepuram- Ph:044-27230492. cockancheepuram@preethi.in</p> <p>Karaikal- Ph:04385-225818. cockaraikal@preethi.in</p> <p>Karaikudi- Ph:04565-236376. cockaraikudi@preethi.in</p> <p>Kumbakonam- Ph:0435-2425142. cockumbakonam@preethi.in</p> <p>Madurai- Ph:0452-2347386. cocmadurai@preethi.in</p> <p>Mayavaram- Ph: 04364 -241202. cocmayavaram@preethi.in</p> <p>Nagercoil- Ph:04652-244505. cocnagercoil@preethi.in</p> <p>Namakkal- Ph:04286-222592. cocnamakkal@preethi.in</p> <p>Pudukottai- Ph:04322-224195. cocpudukottai@preethi.in</p> <p>Ramanathapuram- Ph:04567-222344. cocramnath@preethi.in</p>	<p>Salem- Ph: 0427-2250578. cocsalem@preethi.in</p> <p>Tanjore Ph:04362-27. coctanjore@preethi.in</p> <p>Tirunelveli- Ph:0462-2321824. coctirunelveli@preethi.in</p> <p>Tiruppur- Ph:0421-4402324. coctiruppur@preethi.in</p> <p>Tiruvannamalai- Ph:04175-254900. coctiruvannamalai@preethi.in</p> <p>Tiruchirappalli- Ph:0431-2751288. coctiruchirappalli@preethi.in</p> <p>Tiruvallur- Ph:04366-220766. coctiruvallur@preethi.in</p> <p>Trichy - Ph:0431-2751288. coctrichy@preethi.in</p> <p>Trichy II- Ph:0431-2415181. coctrichy2@preethi.in</p> <p>Tuticorin- Ph:0461-2331668. cocuticorin@preethi.in</p> <p>Udumalpet- Ph:04252-221477. cocudumalpet@preethi.in</p> <p>Vellore- Ph:0416-2215916. cocvellore@preethi.in</p> <p>Villupuram- Ph:04146-227008. cocvillupuram@preethi.in</p> <p>Virudhunagar- Ph:04562-420624. cocvirudhunagar@preethi.in</p> <p><b>KARNATAKA</b></p> <p>Bangalore HNR - Ph:080-25452466. cocbangalorehnr@preethi.in</p> <p>Bangalore JNR - Ph:080-2222583. cocbangalorejnr@preethi.in</p> <p>Bangalore RNR - Ph:080-23324161. cocbangalore@preethi.in</p> <p>Bellary- Ph:0839-2271739. cocbellary@preethi.in</p> <p>Belgaum- Ph: 8031-2464093. cocbelgaum@preethi.in</p> <p>Bidar- Ph:0832-2445085. cocbidar@preethi.in</p> <p>Bijapur- Ph:0832-2410434. cocbijapur@preethi.in</p> <p>Mysore- Ph:0821-2443966. cocmysore@preethi.in</p> <p>Shivamogga- Ph:08182-403578. cocshivamogga@preethi.in</p> <p>Channarayana- Ph:0824-2410434. cocchannarayana@preethi.in</p> <p><b>ANDHRA PRADESH AND TELANGANA</b></p> <p>Eluru- Ph:08812-21841. coceluru@preethi.in</p> <p>Guntur- Ph:0863-2214551. cocguntur@preethi.in</p> <p>Kutakapalli- Ph:040-23063848. cockutakapalli@preethi.in</p>	<p>Hyderabad- Ph:040-27661588. cochyderabad@preethi.in</p> <p>Saroor nagar- Ph:040-24044558. cocsaroor@preethi.in</p> <p>Kadappa- Ph:08562-246552. cockadappa@preethi.in</p> <p>Karim Nagar- Ph:0878-2245211. cockarimnagar@preethi.in</p> <p>Khammam- Ph:08742-228970. cockhammam@preethi.in</p> <p>Kurnool- Ph:0374003985. cockurnool@preethi.in</p> <p>Mancherial- Ph:08736-254222. cocmancherial@preethi.in</p> <p>Nellore- Ph:0861-2321998. cocnellore@preethi.in</p> <p>Nizamabad- Ph:0862-229526. cocnizamabad@preethi.in</p> <p>Ongole- Ph:08592-264914. cocongole@preethi.in</p> <p>Rajahmundry- Ph:0883-2441321. cocrajahmundry@preethi.in</p> <p>Secunderabad- Ph:040-27819516. cocsecunderabad@preethi.in</p> <p>Srikakulam- Ph:08942-222448. cocsrikakulam@preethi.in</p> <p>Tirupati- Ph:0877-2258966. coctirupati@preethi.in</p> <p>Kolapur - Ph: 0840000005. cocvijayawada@preethi.in</p> <p>Vizag- Ph:0891-2541915. cocvizag@preethi.in</p> <p>Vizianagaram- Ph:0892-228629. cocvizianagaram@preethi.in</p> <p>Warangal- Ph: 9000101920. cocwarangal@preethi.in</p> <p><b>KERALA</b></p> <p>Alapuzha- Ph:0477-2230896. cocalapuzha@preethi.in</p> <p>Attingal- Ph: 0470-2620165. cocatingal@preethi.in</p> <p>Balarapuram- Ph:0471-2408461. cocbalarapuram@preethi.in</p> <p>Calicut- Ph:0465-224050. coccalicut@preethi.in</p> <p>Changanassery- Ph:04881-2424383. cocchanganassery@preethi.in</p> <p>Ernakulam- Cochin- Ph:0484-2370781. cocernakulam@preethi.in</p> <p>Kannur- Ph:0497-2765948. cockannur@preethi.in</p> <p>Kollam- Ph:0474-2708800. cockollam@preethi.in</p>	<p>Kottayam- Ph:0481-2564793. cockottayam@preethi.in</p> <p>Malappuram- Ph:0494-2429955. cocmalappuram@preethi.in</p> <p>Palakkad- Ph:0491-2536016. cocpalakkad@preethi.in</p> <p>Pattanamthitta- Ph:0488-2326605. cocpattanamthitta@preethi.in</p> <p>Perumbavoor- Ph: 9207728100. cocperumbavoor@preethi.in</p> <p>Thalassery- Ph:0490-2341761. cocthalassery@preethi.in</p> <p>Thodupuzha- Ph:04862-220292. cocthodupuzha@preethi.in</p> <p>Thrissur- Ph:0487-2380919. cocthrissur@preethi.in</p> <p>Tripunithura- Ph:0484-2778728. coctripunithura@preethi.in</p> <p>Tiruvandrum- Ph:0471-2341216. coctrivandrum@preethi.in</p> <p><b>MAHARASHTRA</b></p> <p>Mumbai- Ph:9940000005. cocmumbai@preethi.in</p> <p>Pune- Ph:9940000005. cocpune@preethi.in</p> <p>Nagpur- Ph:9940000005. cocnagpur@preethi.in</p> <p>Kolapur - Ph: 9840000005. cockolapur@preethi.in</p> <p>Nashik - Ph:9940000005. cocnashik@preethi.in</p> <p><b>ODISHA</b></p> <p>Bhubaneswar - Ph: 0874-2597356. cocbhubaneswar@preethi.in</p> <p><b>GUJARAT</b></p> <p>Ahmadabad - Ph: 079-2754037. cocahmadabad@preethi.in</p>
---	---	---	---

Customer Care: +91 9940000005  
Email: care@preethi.in

The Manager - Customer care ( Preethi Brand)  
Philips Domestic Appliances India Ltd  
Futura Tech Park, Q4 , 4th Floor, Block B  
#334, OMR,Sholinganallur,Chennai - 600119.  
Ph : 044-24501042 / 24501044 /24507045  
Website: www.preethi.in email: Info@preethi.in

Preethi  
Blu Flame

Glass Top Gas Stove  
GTS 123/124

Preethi  
Blu Flame

Glass Top Gas Stove  
GTS 123/124

## WARRANTY CARD

Date Sold: .....Sl.No: .....

Purchaser's Name & Address: .....

Dealer's Name & Address: .....

Signature: ..... Stamp: .....

- TERMS & CONDITIONS OF WARRANTY AND SERVICE POLICY**
- Retain the original sale bill and the Warranty Card, which should be shown to our Service Centre.
  - Personnel for scrutiny while sending your Glass Top Gas Stove for service to our Authorised Service Centre.
  - The Warranty does not cover damage to the Glass due to mishandling, negligence, breakage or cracking.
  - If the Glass Top Gas Stove is tampered or opened by any unauthorised person, the Warranty is void.
  - All repairs within the 2 year Warranty period (arising from manufacturing defects) will be done 'Free of Charge'. Our Customer Care Centres will not charge you for components (except glass) or labour.
  - For repairs after the expiry of the Warranty period, our Customer Care Centre will levy a nominal charge on components replaced. There is no labour charge and service is free.
  - The Warranty is valid only in the country of purchase.
  - Defective components which are exchanged both under 'Chargeable' & 'Free of Charge' basis, become the property of the Company.
  - All our Customer Care Centres display a list showing the MAXIMUM RETAIL PRICE of all Glass Top Gas Stove.
  - Warranty is void if the Glass Top Gas Stove is used for any purpose other than domestic use.
  - The warranty does not cover for battery.

Preethi  
Blu Flame

Glass Top Gas Stove  
GTS 123/124

## SALE DETAILS

Date Sold: ..... Sl.No: .....

Purchaser's Name & Address(in BLOCK LETTERS):.....

(To be returned to us through our dealer)