

Futura Tech Park, Q4 , 4th Floor, Block B
#334, OMR, Sholinganallur, Chennai - 600119.
Ph : 044-24501042 / 24501044 / 24507045

Designation:

Trouble Shooting:

Problem	Possible Reason	Solution
Gas stove does not ignite	Main gas valve is closed.	Open the main gas valve.
	Bend/Block in rubber tube.	Straighten the tube / remove the blockage.
	No gas supply.	Replace the gas cylinder
	No proper flow in the tube.	It could be due to air mixing repeat to ignite to remove the air in the tube.
Gas leakage	Leakage from gas tube	Close the main gas valve and replace the tube with a new one
	Gas control knob not closed properly	Switch off the gas knob properly
	Leakage from gas cylinder regulator	Replace your regulator / inform your gas dealer
If flame is abnormal	Flame ports are clogged	Clean the burner holes with burner cleaning pin or wire brush

Save Gas, Save Money:

- ❖ Don't boil milk directly from freezer allow it to attain liquid state before boiling
- ❖ Keep the pan closed whenever possible
- ❖ Use metals such as stain less steel with Copper bottom whenever possible
- ❖ Maintain shiny outer surfaces of vessel and wipe utensils dry before placing them on the burner
- ❖ Don't use too much water while cooking as evaporating off the excess water will mean more use of LPG.
- ❖ Use pans which are wide enough to cover the entire flame
- ❖ Once a curry comes to a boil reduce the flame so that it is just enough to maintain boiling
- ❖ Check the regulator, pipes, burner for leaks and also ensure that regulator is switched off after cooking to eliminate any chance of wastage due to small leaks.

Blu Flame

Table of Contents

Contents	
1.	Features
2.	Product Contents
3.	Technical Specifications
4.	How to Assemble
5.	User Instructions
6.	How to use Auto Ignition
7.	How to use Extendable Legs
8.	Glass Safety
9.	Do's & Don'ts
10.	Trouble Shooting
11.	Save Gas, Save Money
12.	Warranty Card
13.	Customer Care

Features

- ❖ Easy to clean.
- ❖ Aesthetically designed body.
- ❖ Heavy duty and superior quality brass gas controls & brass burners for long life and higher efficiency.
- ❖ Best in class powder coated pan support and main gas pipe with in / out coating for easy gas flow and to avoid rust formations.
- ❖ Stainless steel detachable and fine polished driptrays / removable trays
- ❖ Best in class and heavy duty aluminium mixing tube for better thermal efficiency.
- ❖ Quality standards conforms to IS 4246.
- ❖ Thermally toughened glass.
- ❖ Extendable Leg.
- ❖ Ant guard Jet
- ❖ High grip knob for easy opera?ng of gas controls
- ❖ Tripad mixing tube.
- ❖ Triad T pipe (3Burner model only)

Thermally Toughened Glass

Gear guided Burner

Powder Coated Sturdy Pan Support

3X Triad Nozzle Design

Ant Guard Jet

Tri pad mixing Chamber

Blu Flame

Preethi

Blu Flame

Glass Top Gas Stove
GTS 401/403

YOUR COMMENTS on the performance of your Glass Top Stoves and suggestions for product improvement. IN CASE OF COMPLAINTS write to us directly or call Tel. No.: +91 9940000005 (Chennai)

Preethi

Blu Flame

Glass Top Gas Stove
GTS 401/403

WARRANTY CARD

Date Sold:SI. No: [Redacted]

Purchaser's Name & Address:

Dealer's Name & Address:

Signature: _____ Stamp: _____

TERMS & CONDITIONS OF WARRANTY AND SERVICE POLICY

1. Retain the original sale bill and the Warranty Card, which should be shown to our service personnel for scrutiny at our Customer Care Centres or during Home Services.
2. You can choose to register your product at www.preethi.in/product-registration to avail service even without the Warranty Card.
3. The Five Year Warranty on glass and burners does not cover damage to the glass and burners due to mishandling, negligence or breakage.
4. All repairs to the glass and burners within the Five Year Warranty period will be done "Free of Charge". Preethi offers "Life Long Free Service". There will be no charges for components or labour during the warranty period.
5. For repairs after the expiry of the Warranty period, nominal charges will be applicable for the components replaced. There will be no charges for labour, even for home service. For home service an additional nominal travel cost will be charged.
6. Free service and replacement under Warranty does not extend the term of Warranty in any manner.
7. The Warranty is valid only in the country of purchase and only at Preethi Customer Care Centres.
8. Defective components which are exchanged or replaced both under "Chargeable" and "Free of Charge" basis, becomes the property of the Company to avoid inappropriate usage.
9. You are entitled to a free check up every 6 months with any of our Customer Care Centres.
10. The Warranty will become void, if the product is tampered with or opened by any unauthorised person.
11. The Warranty will become void if the product meant for domestic use is used for any other purpose.
12. Service beyond the period of Warranty is subject to availability of spares.

How to Assemble:

- ❖ While unpacking the product make sure that all parts of the glass top gas stove are available in the pack.
- ❖ Place gas stove on a flat surface.
- ❖ Turn your gas stove to upside down position and fix the legs at the given bottom space.
- ❖ After removing the nozzle cap, connect the gas cylinder by fixing the ISI certified rubber tube to the inlet of the nozzle.
- ❖ Push the rubber tube which is attached to the gas regulator in to the nozzle as far as it goes. (Ref fig.a)
- ❖ Place the gas control knob on the gas control valve stem and push firmly inside. (Ref fig.b)
- ❖ The cylinder should be always in vertical position and should not be used horizontally. (Ref fig.c)
- ❖ Place the drip/spill trays in position.
- ❖ Place pan support on top by aligning to the holes on the stove.
- ❖ The tube used to connect the stove should be within 1.5 m (4.5 ft). It must not be extended from one place to another and must not past through doors, windows, walls, partitions, concrete slabs or floors.



Blu Flame

User Instructions:

- ❖ Open the gas regulator of the cylinder.
- ❖ Push the gas control knob and turn it to anti clockwise direction towards the 'ON' position (Ref fig.a) while simultaneously lighting a match stick or gas lighter close to the top of the burner.
- ❖ Due to the air in the gas tube the burners may not ignite during the first time, turn the gas control knob clockwise to the 'OFF' position and try again until the burner ignites.
- ❖ Keep the gas control knob in 'ON' position while cooking. (Ref. fig.b)
- ❖ To reduce the flame (SIM) further turn the gas control knob anti clockwise. (Ref. fig.c)
- ❖ To put off the burner, turn the gas control knob clockwise to the 'OFF' position until the knob projects out. After changing the position close the gas regulator of the cylinder.
- ❖ Keep the stove and gas cylinder valve in 'OFF' position when not in use.
- ❖ Keep sufficient distance between the lighter and the burner while lighting the stove.
- ❖ Do not light stove placing the vessel on the pan support.

Do's

- ❖ Use liquified petroleum gas (LPG) only.
- ❖ The room must be well ventilated.
- ❖ Place the stove on a flat surface that is over the height of the gas cylinder.
- ❖ Use good quality rubber hose meant for LPG stoves.
- ❖ Clean the burners regularly so that the holes in the burners do not get clogged.
- ❖ Check the gas tube regularly for wear and tear or leakage.
- ❖ Keep the gas stove and gas cylinder valve in 'OFF' position when it is not in use.
- ❖ Clean the burners with a wire brush and burner hole cleaner. If you wash the burner, wipe and dry before fixing.
- ❖ Clean the pan support in normal water and dry before use.
- ❖ If you suspect any gas leakage, open all windows, do not operate any electrical devices or switches and close the regulator of the cylinder.
- ❖ Use Burner Cleaning pin to clean while spillage

Don'ts

- ❖ Do not keep the tube in contacts with any other parts of stove.
- ❖ Do not use the stove to dry towels, cloth etc.,
- ❖ Do not use vinyl plastic tube, as it is highly inflammable.
- ❖ Do not touch the pan supports of the stove while in use.
- ❖ Do not keep inflammable substances near the gas stove.
- ❖ Do not use a tube with twists, loops, links or any external pressure.
- ❖ Do not apply excessive pressure to the gas control knob.
- ❖ Do not allow children near the stove.
- ❖ Do not keep the cylinder in a tilted or horizontal position.
- ❖ Do not check for gas leaks with a flame.

For Glass Safety:

- ❖ Do not place any hot vessels on the top of the glass
- ❖ Do not use the stove as tandoor.
- ❖ Do not keep any inverted kadai or similar kind of vessels on the top of glass which extinguish the flame. It should be strictly avoided.



Blu Flame

Preethi

Blu Flame

Glass Top Gas Stove
GTS 401/403

SALE DETAILS

Date Sold: SI.No: [Redacted]

Purchaser's Name & Address(in BLOCK LETTERS):.....

(To be returned to us through our dealer)

Preethi

Blu Flame

Glass Top Gas Stove
GTS 401/403

Customer Care: +91 9940000005
Email: care@preethi.in

CUSTOMER CARE CENTRES

TAMIL NADU

Avadi- Ph:044-26555387, ccavadi@preethi.in

Kelays- Ph:044-26420318, cckelays@preethi.in

Porur- Ph:044-24761797, ccporur@preethi.in

T Nagar-Ph:044-24347418, ccnagpur@preethi.in

Tambaram-Ph: 044-22261510, ccmbaram@preethi.in

Adyar-Ph:044-24462099, ccadyar@preethi.in

Chidambaram- Ph:04144-223256, ccchidambaram@preethi.in

Coimbatore I-Ph:0422-2252687, cccoimbatore@preethi.in

Coimbatore II- Ph:0422-2540687, cccoimbatore2@preethi.in

Coonoor- Ph:0423-2236878, ccconoor@preethi.in

Dharmapuri- Ph: 04342-263233, ccchamapur@preethi.in

Didigul - Ph:0451-2423060, ccddigul@preethi.in

Erode-Ph:0424-2221200, cceroode@preethi.in

Gobichettipalayam-Ph:04285-228889, ccgobit@preethi.in

Hosur-Ph:04344-243434, ccshosur@preethi.in

Kanchepuram- Ph:044-27230492, cckanchepuram@preethi.in

Karaikal- Ph:04368-225816, ccokaraikal@preethi.in

Karaikudi- Ph:04565-236376, ccokaraikudi@preethi.in

Karur-Ph:04324-241989, ccokarur@preethi.in

Kumbakonam- Ph:0435-2425142, ccokumbakonam@preethi.in

Madurai- Ph:0452-2347386, ccmadurai@preethi.in

Mayavaram-Ph: 04364 -241202, ccmayavaram@preethi.in

Nagercoil-Ph:04652-244505, ccnagarcoil@preethi.in

Shivamogga- Ph:08182-403578, ccshivmogga@preethi.in

Namakkal- Ph:04286-222592, ccnamakkal@preethi.in

Puducherry- Ph:0413-2229599, ccopuducherry@preethi.in

Pudukottai- Ph:04322-224195, ccopudukottai@preethi.in

Ramanathapuram- Ph:04567-222344, ccramanath@preethi.in

Avadi- Ph:044-26555387, ccavadi@preethi.in

Tanjore-Ph:04362-27, ccshen@preethi.in

Tirunelveli- Ph:0462-2321824, ccshen@preethi.in

Tirupur-Ph:0421-4240234, ccshen@preethi.in

Tiruvannamalai- Ph:04175-254900, ccshen@preethi.in

Trichy - Ph:0431-2751288, ccshen@preethi.in

Trichy II-Ph:0431-2415181, ccshen@preethi.in

Udumalpet- Ph:04252-221477, ccshen@preethi.in

Tuticorin- Ph:0461-2331688, ccshen@preethi.in

Vellore- Ph:0416-2215916, ccshen@preethi.in

Villupuram- Ph:04146-227008, ccshen@preethi.in

Bangalore JNR- Ph:080-2225983, ccshen@preethi.in

Bangalore RNR - Ph:080-2324161, ccshen@preethi.in

Bellary- Ph:0839-2271139, ccshen@preethi.in

Belgaum- Ph:0832-221841, ccshen@preethi.in

Goa- Ph:0832-2445085, ccshen@preethi.in

Goa- Ph:0832-2445085, ccshen@preethi.in

Hydrabad- Ph:040-27661588, ccshen@preethi.in

Kadapa- Ph:08562-245552, ccshen@preethi.in

Karamnagar- Ph:0878-2245211, ccshen@preethi.in

Khammam- Ph:08742-228970, ccshen@preethi.in

Kurnool- Ph:087400985, ccshen@preethi.in

Mancherial- Ph:08736-254222, ccshen@preethi.in

Nizamabad- Ph:08462-229526, ccshen@preethi.in

Nellore- Ph:0861-2321998, ccshen@preethi.in

Ongole- Ph:08592-264914, ccshen@preethi.in

Rajahmundry- Ph:0883-2441321, ccshen@preethi.in

Secunderabad- Ph:040-27819516, ccshen@preethi.in

Srikakulam- Ph:08942-222448, ccshen@preethi.in

Tirupati- Ph:0877-2258966, ccshen@preethi.in

Vijayawada- Ph:0865-2431158, ccshen@preethi.in

Vizianagaram- Ph:08922-226629, ccshen@preethi.in

Warangal- Ph: 9000101020, ccshen@preethi.in

Alapuzha- Ph:0477-2230896, ccshen@preethi.in

Attingal- Ph: 0470-2620165, ccshen@preethi.in

Balarampuram- Ph:0471-2408461, ccshen@preethi.in

Calicut- Ph:0465-2745008, ccshen@preethi.in

Ernakulam- CochIn-Ph:0484-2370781, ccshen@preethi.in

Changanacherry- Ph:04881-2424383, ccshen@preethi.in

Kanhangad- Ph:0457-2200799, ccshen@preethi.in

Kollam- Ph:0474-2708800, ccshen@preethi.in

Kottayam- Ph:0481-2584793, ccshen@preethi.in

Malappuram- Ph:0494-2429955, ccshen@preethi.in

Palakkad- Ph:0491-2536016, ccshen@preethi.in

Pattanamthitta- Ph:0468-2325605, ccshen@preethi.in

Perumbavoor- Ph: 9207728100, ccshen@preethi.in

Thalassery- Ph:0490-2341761, ccshen@preethi.in

Thodupuzha- Ph:04862-220292, ccshen@preethi.in

Thrissur- Ph:0487-2380919, ccshen@preethi.in

Tripanthura- Ph:0484-2778728, ccshen@preethi.in

Trivandrum- Ph:0471-2341216, ccshen@preethi.in

MAHARASHTRA

Mumbai- Ph:9940000005, ccshen@preethi.in

Pune- Ph:9940000005, ccshen@preethi.in

Nagpur- Ph:9940000005, ccshen@preethi.in

KARNATAKA

Bangalore - Ph: 9940000005, ccshen@preethi.in

ODISHA

Bhubaneswar - Ph: 0674-2597356, ccshen@preethi.in

GUJARAT

Ahmadabad - Ph: 098-2754037, ccshen@preethi.in

The Manager - Customer care (Preethi Brand)

Philips Domestic Appliances India Ltd

Futura Tech Park, Q4 , 4th Floor, Block B

#334, OMR,Sholinganallur,Chennai - 600119.

Ph : 044-24501042 / 24501044 /24507045

Website: www.preethi.in email: Info@preethi.in