Service Record				
Date	Complaints & Remarks			


To be retained by customer

VERY IMPORTANT:
THE ONE YEAR WARRANTY
IS VALID ONLY IN THE
COUNTRY OF PURCHASE.

## **TO:**

# Philips Domestic Appliances India Ltd.

Futura Tech Park, Q4, 4th Floor, Block-B, #334, Rajiv Gandhi Salai, (OMR), Sholinganallur, Chennai-600119. INDIA. Ph:91-44-24501042, 91-44-24501044

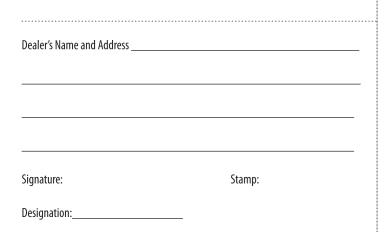

## PREETHI STANDS FOR INNOVATION

Preethi is the First Brand to bring you innovations like...

## **Mixer Grinders**























Smart Ignition
Switch knob controlled burner ignition for durability and safety.

## Glass Top Gas Stove



Removable Drip Tray First of its kind in a Glass top & easy to clean.



## Induction Cooktop





# Philips Domestic Appliances India Ltd.

Futura Tech Park, Q4, 4th Floor, Block-B, #334,
Rajiv Gandhi Salai, (OMR), Sholinganallur, Chennai-600119. INDIA.
Ph:91-44-24501042, 91-44-24501044

Email: info@preethi.in | Web: www.preethi.in

## **Preethi Customer Care Centres**

## **GANDHI APPLIANCES**

LLC 7447, Linder AVE, Skokie, IL 60077. PH: (847) 77-3079, Fax: (847) 983-0907 www.gandhiappliances.com

## QATAR

1. GOLDEN HOUSE, Blue Salon Building, Suhaim Bin Hamad Street, P.O. Box 3750, Doha, **Qatar**. Tel: 97-44-478 606. Fax: 97-44-791 138.

#### IJΔF

2. ELEMENT MIDDLE EAST LLC, P.O. Box 6218, **Dubai**. Tel: 97-1-4-3530 987. Fax: 97-1-4-3534 366. email: elemenet@emirates.net.ae

#### **BAHRAIN:**

3. F.F. WATCH CO. WLL, P.O. Box 164, Manama, Kingdom Of **Bahrain**. Tel: 97-33-253 729, 215 937. Fax: 97-33-277 708. email: abbas786@batelco.com.bh

#### **KUWAIT**

4. FIVE STAR EST.
Salhiya Fahed Al-Salem Street,
Al-Salamah Tower Mezzanine
Floor Shop No.10, 11, 13,14,
PO Box: 4734 Safat
Code No. - 13048.
Kuwait.Tel: 00965 2437630,
00965 2401482
Fax: 00965 2437630.
email: fivestar@gmail.com
fivestar2005@yahoo.co.in

## INDONESIA:

5. PT ANEKA DIMARCO, Komplek Grenvil, Blok AS-38, Kelurahan Duri Kepa, Jakarta 11510. Tel: 62-21-6385 8674, 6385 8223. Fax: 62-21-6313 039. email: dci@dnet.net.id

#### SRI LANKA:

6. ESWARAN BROTHERS DUTY FREE PVT LTD No.104 / 11, Grandpass Road, Colombo 14 Sri Lanka Tel: +94112331925 / +94114796760. email:perry@eswaran.com Web: www.eswaran.com

7. S.P. ENTERPRISES No.297/7 George R De Silva Mawatha, Colombo 13 Srilanka.

#### SINGAPORE:

8. MOHAMED MUSTAFA & SAMSUDDIN CO PTE LTD., 145, Syed Alwi road, Singapore - 207704, Tel: +65 6295 5855 Web: www.mustafa.com.sq

9. JOTHI HOLDINGS PTE LTD JOTHI'S BUILDING, 1, Campbell Lane, Singapore 209882. Tel: 63387008

Tel: 63387008 H/P: 98167425 Fax: 63380070 email: jothistore@singnet.com.sg Website: www.jothi.com.sg

#### SA

10. RAMRAJ CORP. 945 Berryessa Road, Unit 4, San Jose, California - 95133 Tel: 1-650-695-9009 eastwestthebest@gmail.com Website: eastwestusastore.com

11. PERFECT PENINSULA INC. 1041 SWEET GRASS TRAIL, FLOWER MOUNT TX75028. USA , PH: 972-691-0686.

12.A & J DISTRIBUTORS Inc, 1325, Ardmore Ave, ITASCA, IL-60143.USA. Ph: 630-875-9000

# Preethi STEELE



Harmony in Black & Steel

the evolution of STEELE

550 Watt Powerful Motor

Extra Sturdy Handles

Strong Improved Couplers

110-120 VOLT UL recognized Motor FILE No.: E233031



Engineered for performance, backed by STEELE QUALITY PLEDGE

## **INSTRUCTION MANUAL & ONE YEAR WARRANTY CARD**

## **Technical Specifications**

Model Name & No. : Steele - MG 206 Voltage : 110-120V ~ 60 Hz.

Power Consumption : 550 Watt Insulation : Class 'A' Protection : Class I

Motor

Rating : Ordinary Total rated ON time

30 minutes (max.), Continuous ON for

5 minutes (max.) and OFF for

2 minutes (min.) Rest time 45 minutes.

: Universal 550 Watt high power motor

No load speed 18,500 RPM (approx.) With load speed 11,500 RPM (approx.)

With toda speed 11,500 K

Material of Body : Stainless Steel & ABS

Material of Jars : Stainless steel

Blade Assemblies : Stainless steel, machine ground

& polished

Speed Controls : Rotary switch with 3 speeds & incher Flex cord : PVC insulated 3 core flexicord with

10A plugtop & earthing

Country of Origin : INDIA

\*In pursuance with our policy of continuous product improvement, specifications are subject to change without notice.

Gross Weight	5.5 kgs (approx.)		
Size of Carton	50 cm (L) x 26 cm (W) x 26.5 cm (H)		
Warranty	1 Year		



Philips Domestic Appliances India Ltd.
Futura Tech Park, Q4, 4th Floor, Block-B,
#334, Rajiv Gandhi Salai, (OMR),
Sholinganallur, Chennai-600119. INDIA.


Ph:+91-44-24501042, +91-44-24501044.


Email: info@preethi.in | Web: www.preethi.ir

Jar Capacity					
		Rated Capacity			
Jar	Size	Dry	Wet	Liquidise	Whip
Big Jar	1.5 litre	0.6 litre	0.5 litre	1.0 litre	Min: 4 Eggs Max: 8 Eggs
Medium Jar	1.0 litre	0.4 litre	0.3 litre	-	-
Chutney Jar	0.5 litre	0.3 litre	0.2 litre	-	-

Minimum Capacity for all the above - At least up to Blade level

#### KNOW YOUR PREETHI STEELE

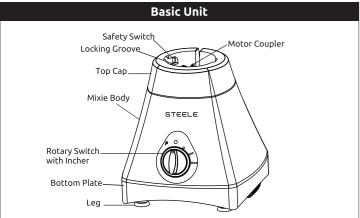

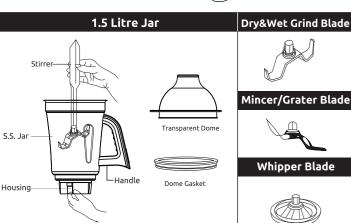

Hold Jar coupler and fix required Blade onto the spindle by gently screwing down in an anti clockwise direction with the spanner provided on the Stirrer, until it is firm. DO NOT OVER TIGHTEN

Middle Jar - 1.0 Litre	Chutney Jar 0.5 Litre
P.P. Lid  Dome Gasket  Handle  S.S. Jar  Removable  Dry/Wet  Grinding Blade  Housing	Transparent Dome  Dome Gasket  S.S. Jar  Fixed  Multipurpose  Blade  Housing

Jar Placing: Place the Jar on top of the base unit ensuring alignment of the jar to housing. Rotate the jar in clockwise direction ensuring jar locking projection fits into the locking grooves provided in the top cap.

**Safety Switch:** The mixie cannot be operated unless the jar is securely locked onto Top cap. Ensure the Switch is 'OFF' position to allow the water to drain off.

**Dome:** Ensure that the Dome Gasket is properly fitted & Dome is

properly fitted on jar then hold Dome gently while operating. **Speed control:** Turn rotary switch clockwise for speeds 1, 2 & 3 as desired. Rotate the switch in anticlockwise direction for few seconds and release to activate Inching or Pulsing. (Inching is especially useful for wet grinding of chutneys, mincing meat, grating vegetables, crushing ice, etc.,)

#### **HOW TO USE YOUR Preethi Steele**

PREETHI is provided with PVC insulated flexicord with 10A plugtop and earthing. Plug the Power Cord to a 110-120V ~ 60 Hz supply only.

#### **BEFORE FIRST USE**

Wash before 1st use - Take some warm soapy water in the jar so that the blade is completely immersed and close the lid. Fix the jar on power unit and run for a minute. Then pour out soapy water and fill it with clean water and run for a minute. Repeat this process till any trace of soap is removed.

#### Grinding Instructions:

## ROASTED CEREALS, RAW RICE, DAL, CHILLI POWDER, GARAM MASALA, DHANIYA JEERA POWDER. CURRY LEAF POWDER. **COFFEE POWDER, SAMBAR / RASAM POWDER....**



- Ensure Blade, Jar, Lid and ingredients are totally dry.
- Run on Speed 1,2 & 3.
- If you need finer powder, wait for 1 minute and grind again for 1 to 2 minutes.

## IDLI, DOSA, UTHAPPAM, APPAM, PESARATTU, VADAI...

- Soak Rice/Dal for 4 to 5 hours or as required
- Drain water from ingredients.
- Run on Speed 1,2 & 3 adding water gradually when required.
- If Material sticks to the sides of the Jar, stop and stir using Stirrer, run again.
- Ensure free circulation by adding enough water.
- Do not allow batter to get heated up.
- Do not add too much water, where thick paste is required.
- Grind twice if quantity is more.

**Note:** While wet grinding tough batter, air bubbles may enter the paste. This will result in the blade rotating freely and an increase in noise. If so, stop, stir the paste and restart.

## COCONUT, TOMATO, ONION, CORIANDER, MINT CHUTNEY

• Inch 5 to 7 times to powder ingredients.

Then add water as required and Grind on Speed 1,2 & 3.

## MEAT MINCING, VEGETABLE GRATING, ICE CRUSHING...

- 1. Trim fat from meat and remove all bones.
- 2. Cut meat into 1" cubes.
- 3. Fill upto blade level only.
- 4. Inch 10 to 20 times or till material is minced/grated.
- 5. Repeat if quantity is more.

- 1. Use the Mincer Blade for mincing operation only.
- 2. Operate in 'Pulse' mode only when using the Mincer Blade.

## LASSI, EGG WHIPPING, BUTTER CHURNING

- 1. The Whipper Blade can be used only for whipping / churning.
- 2. For whipping/churning run on Speed 1 only.



"Caution: If the supply cord is damaged, it must be replace by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"

Note: This appliances is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 
## **CLEANING YOUR MIXIE**

- 1. Always use the spatula provided to remove/stir ingredients
- 2. Clean the Mixie body and top cap with a damp cloth & wipe dry.
- 3. Do not use abrasives or immerse the power unit in water for cleaning.
- 4. To clean the jars, fill the jar with 1/2 litre of water & a teaspoon of mild cleaning powder or liquid.
- 5. Run the Mixie on Speed 1 for 30 seconds, leaving the Blade fixed to the spindle of the Stainless Steel Jar.
- 6. Rinse & dry. Always store jars in inverted position to allow the water to drain off.

## **OVERLOAD PROTECTOR**


If the Mixie stops while usage due to operation of the overload protector, then

- 1. First Switch OFF the Mixie and unplug the power cord
- 2. Remove some material which is being ground from the jar to decrease the load
- 3. Wait for 3-5 minutes
- 4. Lift the unit and press the OLP reset button projecting out of Bottom Plate.
- 5. Plug in and restart the Mixie.



## **SAFETY SWITCH**

- 1. The Mixie cannot be operated unless the Jar is securely locked on to the Top Cap.
- 2. Ensure the Switch is in 'OFF' position before placing the Jar.

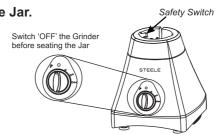



- 1. When operating the Mixie for the first time or after long storage or when the Mixie has been shifted a long distance, rotate the motor shaft by hand through the motor coupler, until the motor shaft rotates freely.
- 2. Unplug the appliance from main power socket before fixing or removing accessories and also when cleaning or when not in use.
- 3. Ensure that the jar is locked properly in the locking grooves provided inside the top cap.
- 4. Ensure blades are fitted properly before running.



- 1. Do not touch moving parts when operating the Mixie.
- 2. Do not overload the Mixie. When hot air emanates from the openings of the top cap. switch off the motor and wait for 3-5 minutes before re-starting.
- 3. Do not add solid ingredients when the motor is running.
- 4. Do not operate with damaged power cord.
- 5. Do not tamper with or attempt to repair the appliance. Contact your nearest Preethi Customer Care Centre.
- 6. Do not grind hot ingredients in the Mixie
- 7. Do not run the Mixie without Dome/Lid Fixed on to the jar.
- 8. Do not place the Jar on top cap of Base unit when the switch is in 'ON' condition.
- 9. Do not put your hand inside the mixer when the appliance is switched 'ON'.
- 10. Never put your hand inside the jar, without switching OFF the Mixie.

# Preethi STEELE

Signature:

## **ONE YEAR WARRANTY CARD**

	Model No. <b>MG 20</b> 6
Serial No.	
Date Sold	
Purchaser's Name and Address	
Dealer's Name & Address	
Dealers Maine & Address	

## TERMS & CONDITIONS OF WARRANTY AND SERVICE POLICY

01. Retain the original sale bill and the Warranty Card, which should be shown to our Service Personnel for Scrutiny while sending your Mixie for service to our Customer Care Centre.

Stamp:

- 02. The One Year Warranty does not cover damage to the Mixie due to mishandling, negligence, breakage or cracking of Transparent Jars, Domes, Lids, Mixie Body and Cap and denting of Stainless
- 03. All repairs (arising from manufacturing defects) within the One Year Warranty period will be done 'Free of Charge'. Our Customer Care Centres will not charge you for components or labour.
- 04. Free service and replacement under warranty does not affect the expiry date of the warranty.
- 05. For repairs after the expiry of the warranty period our Customer Care Centre will charge for the cost of component replaced. There will be no labour charges and life long free service will be provided.
- 06. The Warranty is valid only in the country of purchase.
- 07. Defective components which are exchanged both under 'Chargeable' & 'Free of Charge' basis, become the property of the Company.
- 08. You are entitled to a free check up every 6 months with any of our Customer Care Centres listed in this
- 09. If the Mixie is tampered with or opened by any unauthorised person, the warranty is void
- 10. Warranty is void if the Mixie is used for any purpose other than domestic use.

Preethi	
STEELE	

Model No. MC 206

VOIII	R COMMENTS on the performance of your Mixie and suggestions for product improvement	ant
	IN CASE OF COMPLAINTS write to us directly or call Tel. No.: 91-99400 00005 (Chennai).	.110
	the cost of the co	
		_
		-
Sender's	Name and Address (in BLOCK LETTERS):	
		-

SALE DETAILS	Model No. <b>MG 206</b>
	SALE DETAILS